
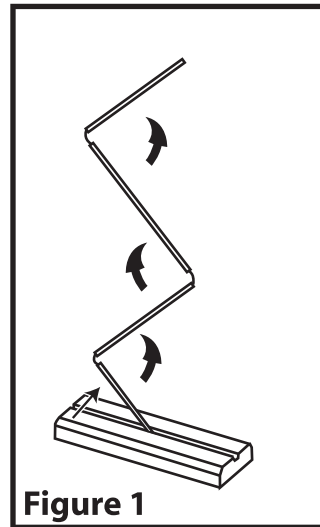


# 24", 32" and 40" Premium Retractable Banner Instructions

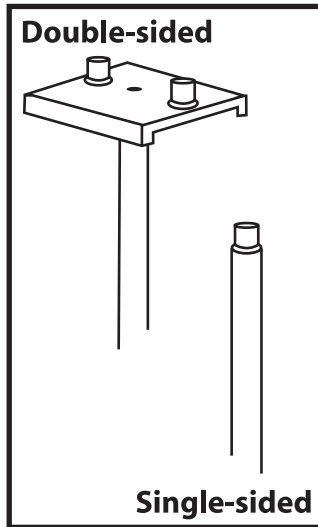

**Step 1.** Unfold poles from center of base and assemble (as seen in fig. 1). Pole should be standing upright (as seen in fig. 2).

**Step 2.** Extend graphic panel out of base and place over top of pole peg (as seen in fig. 3). Repeat this process for the second graphic panel in case of a 2-sided unit (see fig. 4).

**Step 3.** Graphic will be supported by pole, standing up straight (as seen in fig. 5).

**NOTE:** Be careful not to drop banner into base.

