


Animator Graphic Display

Frame Assembly

Assemble frame as shown below. Please use the "Parts Key" to aid in the assembly.

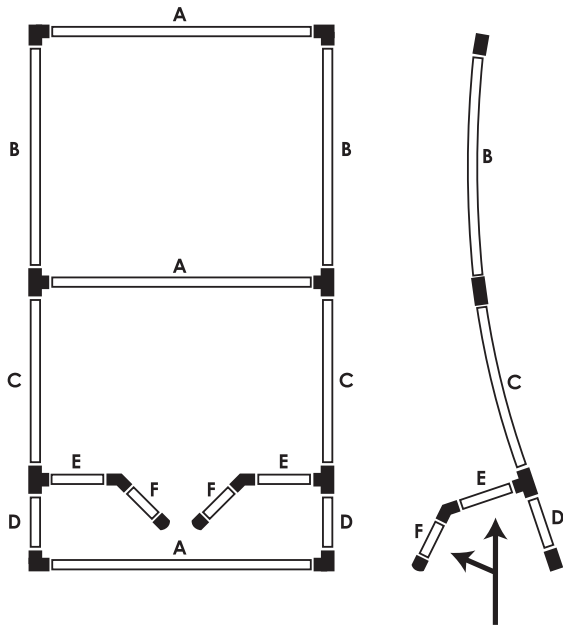

Parts Key

- A: 55" Straight pole
- B: 46" Curved pole
- C: 34.5" Curved pole
- D: 10.5" Straight pole
- E: 11" Straight pole
- F: 7.5" Straight pole

Back Support

- 90° connector
- "T" connector
- 45° connector
- End cap

Banner Assembly

With the frame laying front down, and the T. connectors for the back supports facing up, pull the banner over the right side of the frame.

Once you have the banner stretch to the upper-left corner pull the zipper around the corner. Do the same with the bottom-right corner.

Now zip the rest of the banner up. Have the zippers meet at the bottom of the frame. Attach the back supports to the "T" connectors, and stand display upright.

Note: Images shown are of frame laying face down.



Troubleshooting Hint:

The Animator may not remain "square" if moved. To correct, simply bend the frame until it's back to "square".

This will likely take two people pushing and pulling the frame in opposite directions.

